

For All Your Electrical Needs



JPG Maintenance Construction &
Electric Corp.

Phone: 631-467-6744
Fax: 631-467-6745

JPGCORPORATION.COM

STEP 1 OF 2 FOR RESTORING POWER WITH GENERATOR TO HOUSE

GENERATOR / TRANSFER SWITCH / LAMINATE:

- 1.) When utility power is lost
- 2.) PLUG GENERATOR INTO POWER INLET BOX INSTALLED BY JPG ELECTRIC ON HOUSE; INSERT THE MALE PLUG INTO GENERATOR AND THE FEMALE PLUG INTO THE POWER INLET BOX ON THE HOUSE.
- 3.) CHECK GENERATOR FOR GASOLINE; PLACE THE CHOKE INTO POSITION AND START THE GENERATOR. WAIT 10 -15 SECONDS THEN RETURN THE CHOKE TO ITS RUN POSITION.
- 4.) USING A FLASHLIGHT, GO TO THE PANEL BOX TO LOCATE THE NEW TRANSFER SWITCH INSTALLED BY JPG ELECTRIC. THERE ARE SIX (6) SWITCHES ON PANEL, FLIP ONE AT A TIME INTO THE FAR UP POSITION UNTIL ALL ARE IN THE UP POSITION. POWER IS NOW ON IN THE HOUSE ON SELECTED CIRCUITS.

STEP 2 OF 2 FOR RESTORING POWER WITH GENERATOR TO HOUSE

WHEN UTILITY POWER IS RESTORED:

- 1.) POWER IS RESTORED BACK TO HOUSE WHEN BALANCE of house is BACK ON. WAIT 15 – 20 MINUTES TO ENSURE STABILITY OF POWER.
- 2.) WITH A FLASHLIGHT GO DOWN TO TRANSFER SWITCH AND FLIP ALL SIX (6) SWITCHES ONE AT A TIME TO FAR LOWER POSITION TO RESTORE LIPA POWER. Back to select circuits.
- 3.) REMOVE PLUG FROM GENERATOR FIRST WHILE GENERATOR IS RUNNING REMOVE PLUG FROM HOUSE, ROLL CORD UP, LEAVE GENERATOR RUNNING 15 – 20 MINUTES FOR COOL DOWN PERIOD; THEN SWITCH GENERATOR TO THE OFF POSITION.

HAPPY DAYS POWER IS BACK IN HOUSE!!!!!!!!!!!!

MAINTENANCE SCHEDULE TO BE DONE BY HOMEOWNER

- 1.) ONCE A MONTH THE GENERATOR SHOULD BE STARTED AND RAN IN THE IDLE POSITION FOR 20 – 30 MINUTES.
- 2.) ONCE A MONTH THE OIL IN THE GENERATOR SHOULD BE CHECKED; BEFORE AND AFTER USING THE GENERATOR.
- 3.) 2 – 3 QUARTS OF OIL SHOULD BE ON PREMISES WITH THE GENERATOR AT ALL TIMES.
- 4.) 15 – 20 GALLONS OF GASOLINE SHOULD BE ON THE PREMISES, 2 WEEKS PRIOR TO ANY STORM.
- 5.) EVERY THREE (3) MONTHS GENERATOR SHOULD BE STARTED, HOOKED UP AND TRANSFERRED TO HOUSE FOR ONE (1) HOUR. PLEASE REFER TO THE START UP MANUAL.